

9417 - Main


EVERY DENNISON FILE UPLOAD INSTRUCTIONS

Steps to load a New File:

- 1.) Go to Tools Icon (top right corner – it's the wheels)
- 2.) Click Admin
- 3.) Keyboard will pop up, click on the bottom left corner for numbers to display
- 4.) Password is 1234 -> Press Enter
- 5.) Insert your USB jump stick. Once you have the jump stick in the drive select from the menu (USB port located on bottom left side)
- 6.) Select File Management
- 7.) USB Update -> Update Product Data
- 8.) Copy the Printer
- 9.) Once that is selected it will load automatically and overwrite the old information
- 10.) After the USB downloads, it will jump to the home screen. Remove your USB at this time. If it does not automatically go to home screen, follow below instructions:
 - After the file is uploaded you can now remove your jump stick from the USB drive
 - Then just exit the tools/admin menu and go back to the home screen and you will see the new product information
 - Now you will be ready to adjust the label alignment and printer settings. Please see the next 2 set of instructions.

Once all of the above steps are complete, please follow the below instructions to ensure the file uploaded correctly:

1. Hit the Hot Food Sales Button
2. Select Tab 3 - PIZZA
3. Verify that the Bacon Cheeseburger Pizza is on the file along with “FEBRUARY” being listed in the bottom right corner:

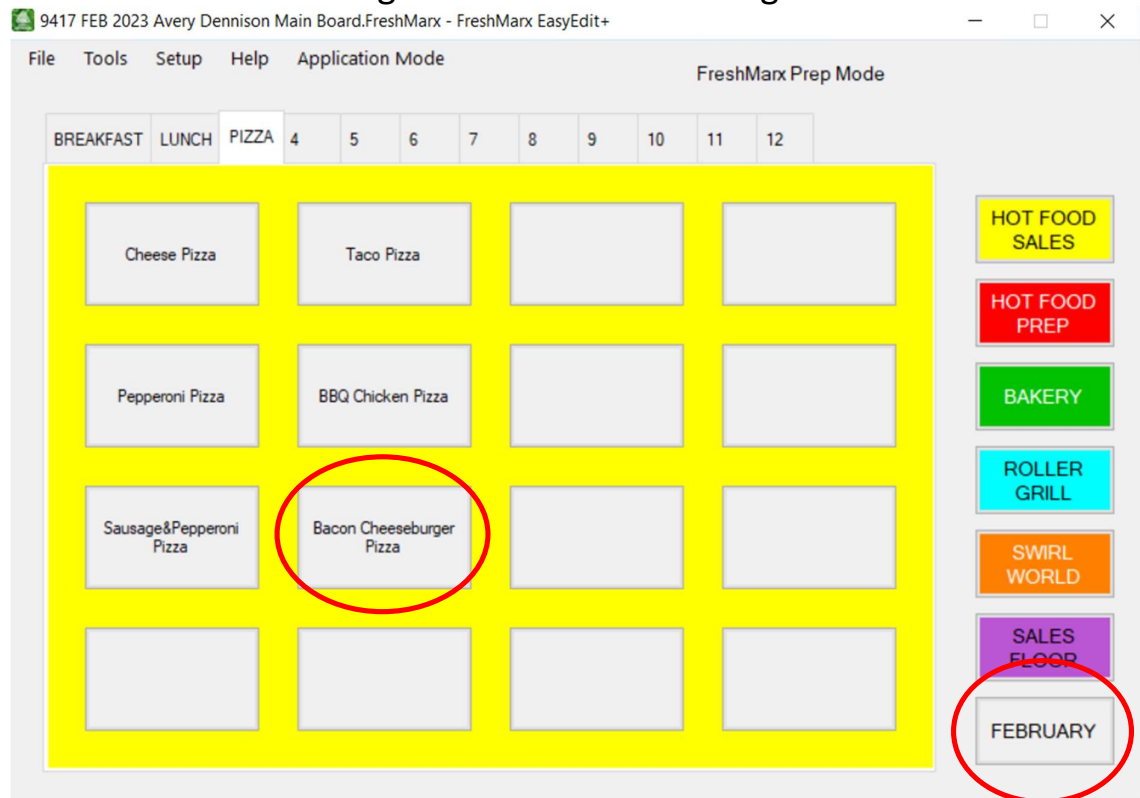

4. Print one label and verify that it prints on small label (see pic below)
5. If it prints correctly, then the program has correctly loaded and the Avery Dennison update is complete.