


9418 - Main
EVERY DENNISON FILE UPLOAD INSTRUCTIONS

Steps to load a New File:

Turn on the machine. Options will pop up for logins.

- 1.) Click Admin
- 2.) Keyboard will pop up, click on the bottom left corner for numbers to display
 - a. Password is 1234 -> Press Enter
- 3.) Insert your USB jump stick. Once you have the jump stick in the drive select from the menu (USB port located on bottom left side)
- 4.) Select "Prep" at the bottom of the screen.
- 5.) Once open, click on "Printer Buttons" on the left side of the screen.
- 6.) Next, use the top right arrows to scroll to the right of the screen.
- 7.) Select "Printer Update."
- 8.) Click on "Update Data File."
- 9.) Click on the file and select "done."
- 10.) Now the file is copied to the printer.
- 11.) Navigate to the Hot Food Sales and select the "PIZZA" tab.
- 12.) Confirm that the "Bacon Cheeseburger Pizza" is present and "FEBRUARY" is listed in the bottom left corner:

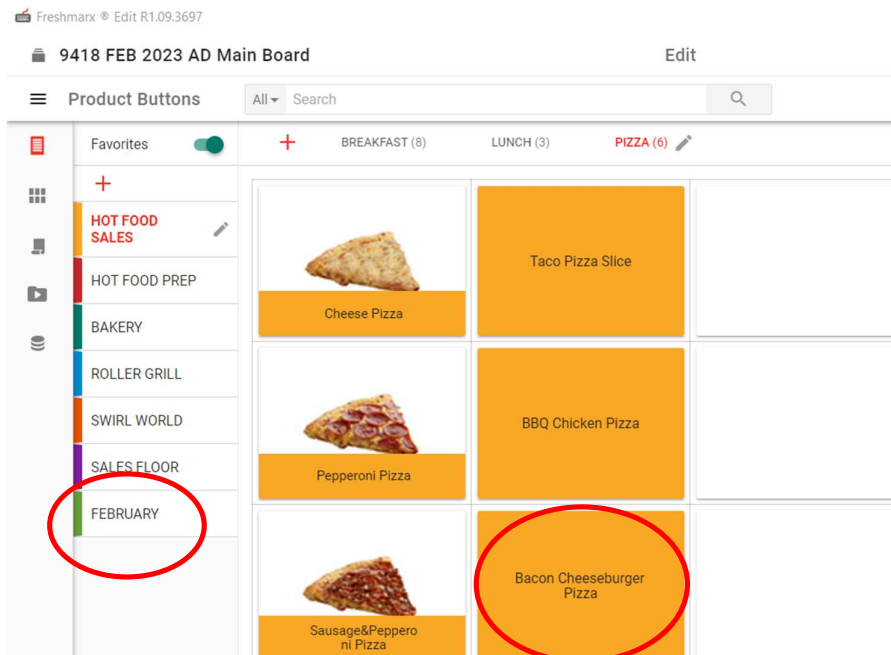

- 13.) Print one label and verify that it prints on large label nutritional label.
- 14.) If it prints correctly, then the program has correctly loaded and the Avery Dennison update is complete.