




- 1. Set unit on a flat surface with rear of unit near a power outlet.
- 2. Plug the unit into a certified electrical outlet.
- 3. Clean unit thoroughly before use.

FOOD EQUIPMENT

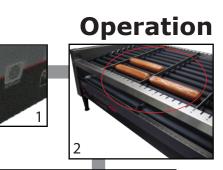


18 IF

- 1. Turn on rocker switch.
- 2. Place the product on rollers.
- 3. Press button for desired zone.
- 4. Unit starts preheat cycle.
- 5. Once preheat is complete the unit will automatically start cook cycle.
- 6. After cook cycle is complete the unit will automatically start the hold cycle.
- Lights for the hold cycle will begin to blink once the product's hold time has expired.

For further instructions refer to operating manual.

Programming

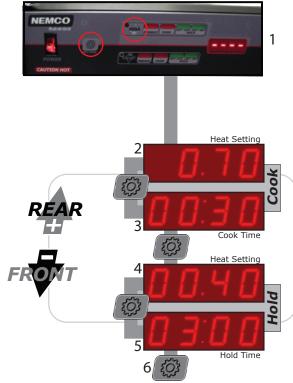

- 1. Press and hold "Settings" button and the appropriate zone to enter setting of the appropriate zone.
- The cook light will begin to flash and the heat setting will be displayed. To adjust setting use "Front / Rear" buttons with arrows.
- 3. Press "Settings" button to advance to cook time. Adjust as desired.
- 4. Press "Settings" button to advance to hold heat time. Adjust as desired.
- 5. Press "Settings" button to advance to hold time. Adjust as desired.
- 6. Press "Settings" button to exit set-up.





www.NemcoFoodEquip.com